

TOUCH-LOCK4

SLIDE PER SBLOCCARE (il led si accende fisso)
SLIDE FOR UNLOCK (the led turn on)




BATTERIA / BATTERY
BATTERIE / BATTERIE


1



2

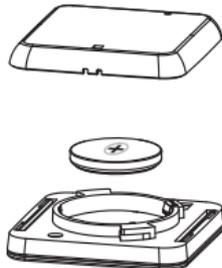

AREA TOUCH / TOUCH AREA

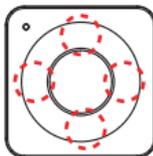

1.1 DESCRIZIONE

Radiocomando rolling code 433.92 MHz

TOUCH-LOCK4: 1 canale con funzione di blocco

1.2 DATI TECNICI

Alimentazione	Batteria CR 2450
Durata batteria	Circa 3 anni
Codifica	Rolling code
Frequenza radio	433.92 MHz ISM
Portata	100 m (interno di edifici: 40 m)
Dimensioni	40 mm x 40 mm h 10 mm

IT

2 PROGRAMMAZIONE DEL TRASMETTITORE

Con questa procedura si programma un canale per abbinarlo a una ricevente compatibile.

Per eseguire la seguente procedura è necessario accedere alla ricevente.

PROCEDURA:

- 1- Attivare la ricevente sulla quale si vuole utilizzare il trasmettitore in modalità "programmazione radio di trasmettitori generici" e selezionare la funzione che si desidera abbinare al tasto (vedi il manuale della ricevente)
- 2- Fare una pressione con il tasto desiderato, il led della ricevente emette tre lampeggi per segnalare l'avvenuta ricezione.
- 3- Il trasmettitore torna allo stato di stand by.

3 IMPOSTAZIONE DEL TEMPO PRIMA DEL BLOCCO TASTI

Default: blocco subito dopo la trasmissione.


Con la seguente procedura è possibile impostare per quanto tempo il trasmettitore resta sbloccato

PROCEDURA:

- 1- Con l'aiuto di una graffetta premere il tasto sul retro del trasmettitore per 3 secondi
il led del trasmettitore si accende fisso
- 2- Con l'aiuto di una graffetta fare una pressione breve del tasto sul retro del trasmettitore
il led del trasmettitore emette dei lampeggi:

LAMPEGGI	TEMPO DI SBLOCCO
1	Blocco immediato
2	5 secondi
3	10 secondi

ATTENZIONE: per cambiare l'impostazione ripetere la procedura dal punto 1, la centrale eseguirà alternativamente 1, 2 o 3 lampeggi.

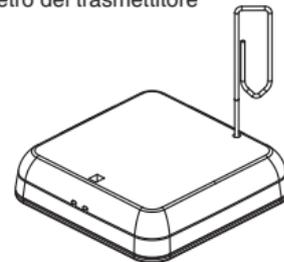

1.1 PRODUCT FEATURES

Remote control rolling code 433.92 MHz

TOUCH-LOCK4: 1 channel with lock function

1.2 TECHNICAL DATA

EN

Power supply	Battery CR 2450
Battery life	About 3 years
Code	Rolling code
Radio frequency	433.92 MHz ISM
Range	100 m (40 m inside buildings)
Dimensions	40 mm x 40 mm h 10 mm

2 TRANSMITTER PROGRAMMING

This procedure is used to programme a channel in order to then associate it with a compatible receiver. Access to the receiver is required to carry out the following procedure.

PROCEDURE:

- 1- Activate the receiver on which you want to use the transmitter in "radio programming of generic transmitters" mode and select the function that you want to associate with the key (see receiver manual).
- 2- Press the desired key; the receiver's LED flashes three times to signal it has been received.
- 3- The transmitter goes back into stand-by.

3 SET THE TIME OF THE LOCK OF THE BUTTON

Default: immediately lock after transmission


With the following procedure is possible to set the unlock time of the transmitter

PROCEDURE:

- 1- With a paper clip, press the button in the back of the transmitter for 3 seconds the led of the transmitter turn on
- 2- With a paper clip, make a short press of the button in the back of the transmitter the led of the transmitter flashes:

FLASHES	UNLOCK TIME
1	Immediately lock
2	5 seconds
3	10 seconds

WARNING: to change the setting, repeat the procedure from point 1; the control unit will alternate between 1, 2 and 3 flashes.

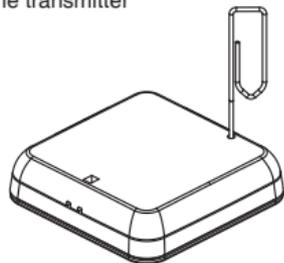

TOUCH-LOCK4



V1.0